


ORIGINAL



BARTHEL

GASOLINE TORCHES

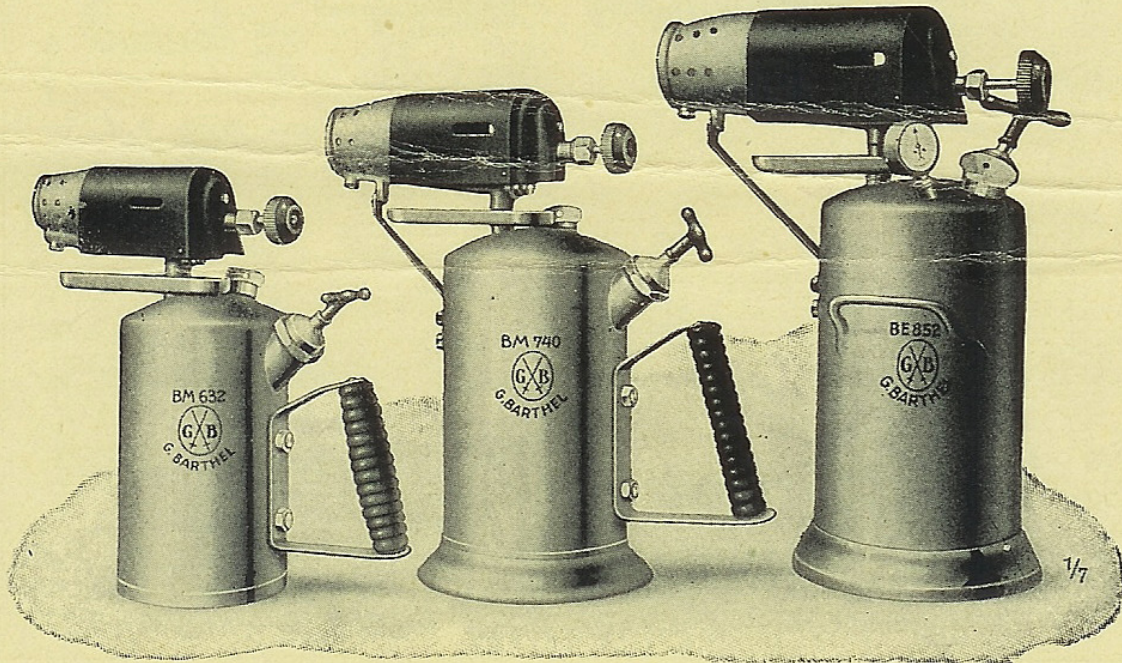

POWERFUL RELIABLE—Intense Blue Flame

Extra-length vaporizing chamber; needle valve and nozzle on separate lines; scientific windshield. Double service pump.

No. 632	2 Quarts	Brass \$16.00	Steel \$15.00
No. 740	1 Gallon	Brass \$21.00	Steel \$20.00
No. 852	1½ Gallons	Steel \$35.00	

DIRECTIONS FOR USING

Fill tank $\frac{3}{4}$ full of gasoline. Close Filler cap and regulating spindle. Pump two or three strokes. Too much pressure when lighting is harmful. Before the preheating fuel is burned up, open regulating spindle slowly.

After burner gets hot enough, pump up and open spindle to desired flame.

CAUTIONS: See that Filler Cap is screwed on Tight while Torch is Working.
Do Not Put In Too Much Pressure.
Release Pressure After The Flame Is Shut Off.

A FEW POINTERS

Strain the gasoline before filling your tank; the torch will give you better service.

If you're losing pressure, see that the pump, the burner head, and the filler cap are screwed in tight.

Keep the pump washer soft with an occasional few drops of oil.

If the nozzle is choked, use the cleaning needle. But do not enlarge the nozzle hole.

If the stuffing box leaks, repack with graphite-covered asbestos threads.

After considerable use, the burner head should be thoroughly cleaned.

All channels must be gone thru, and if necessary, the wire gauze replaced.

Before screwing back on the tank, grease the threads with soft soap.

VAN PRAAG SALES CORPORATION
EXCLUSIVE SALES AGENTS

22 EAST 17th STREET


NEW YORK CITY

ORIGINAL



BARTHEL

Spare Parts for Lamps BM/BE 632, 740 and 852

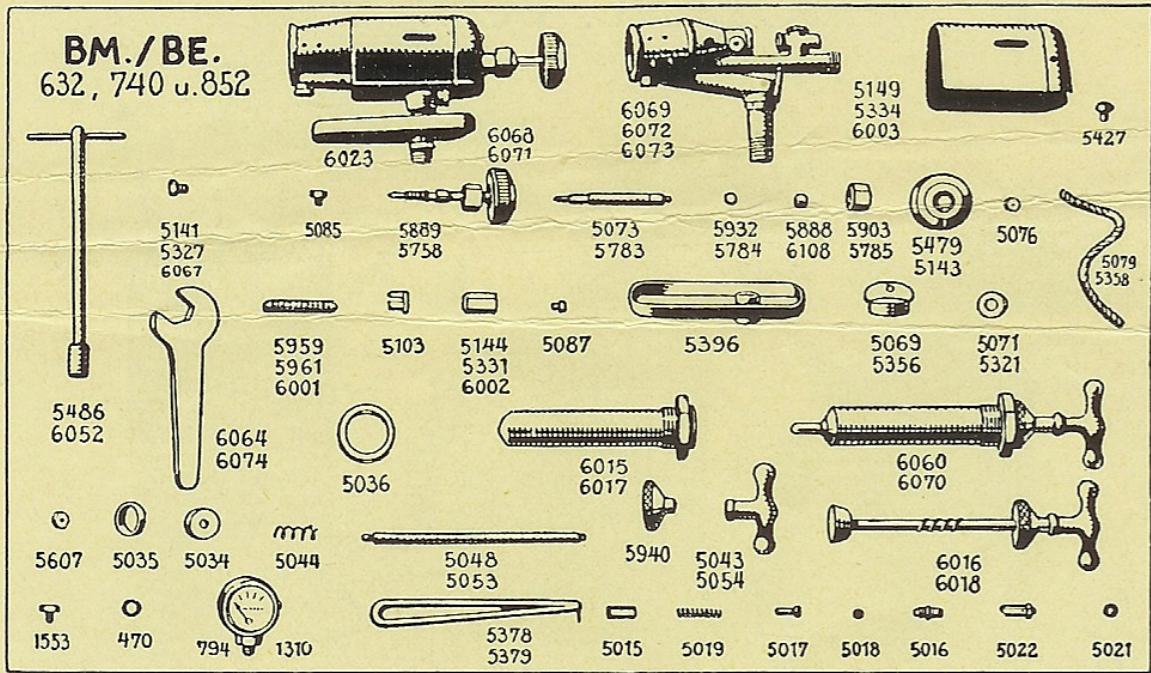

	BM/BE No. 632		BM/BE No. 740		BE No. 852	
	No.	Price	No.	Price	No.	Price
Burner, complete	6068	\$8.00	6071	\$10.00	6023	\$17.50
Gasifier	6069	5.00	6072	6.00	6073	9.00
Nozzle	5141	.40	5327	.40	6067	.40
Air Mixing Tube	5144	.30	5331	.35	6002	.40
Screw for same	5087	.05	5087	.05	5087	.05
Top Plug Screw	5085	.10	5085	.10	5085	.10
Rear Plug Screw	5103	.20	5103	.20	5103	.20
Wire Gauze	5959	.40	5961	.45	6001	.50
Regulating Spindle, complete	5889	.85	5889	.85	5758	1.25
Spindle Shaft	5073	.30	5073	.30	5783	.60
Washer for same	5932	.05	5932	.05	5784	.05
Stuffing Box	5903	.30	5903	.30	5785	.50
Regulating Handle	5479	.20	5479	.20	5143	.25
Washer for same	5428	.05	5428	.05	5428	.05
Nut	5076	.05	5076	.05	5076	.05
Packing for Stuffing Box	5079	.10	5079	.10	5079	.10
Nozzle Wrench	5486	.40	5486	.40	6052	.50
Cleaning Needles	5378	.15	5378	.15	5379	.15
Wind Shield	5149	.50	5334	.60	6003	1.00
Screw for same	5427	.05	5427	.05	5427	.05
Spirit Cup	5222	.50	5222	.50	5222	.50
Filler Cap	5069	.30	5356	.75	5356	.75
Washer for same	5071	.05	5321	.05	5321	.05
Pump, complete	6060	3.00	6060	3.00	6070	4.00
Pump Cylinder	6015	1.50	6015	1.50	6017	2.00
Washer for same	5036	.05	5036	.05	5036	.05
Check Valve	5022	.50	5022	.50	5022	.50
Washer for same	5021	.05	5021	.05	5021	.05
Pump Plunger, complete	6016	1.50	6016	1.50	6018	2.00
Leather Washer	5035	.10	5035	.10	5035	.10
Gauge					1310	3.00