
DOMINION BLOW TORCHES

Parts List FOR ALL MODELS

Part No.	DESCRIPTION	Used on Models	Price
1616B	Needle	504, 505, 508, 509 506, 507 508, 509 500, 501, 502, 503 504, 505 501 501	\$.32
1616	Needle	506, 507	.32
14	Gas Tip	508, 509	.19
16	Gas Tip. Gas Tip. Gas Tip.	500, 501, 502, 503	.19
18	Gas Tip	504, 505	.19
20	Gas Tip	506, 507	.19 3.75
501F 500F	Fount (Pint) Fount (Pint) Fount (Pint) Fount (Pint) Fount (Quart)	500	4.00
503F	Formet (Dinet)	503	3.75
502F	Fount (Ouart)	502	4 00
111A	Valve Stem complete	500 501 502 503	2.96
112	Valve Stem complete	500, 501, 502, 503	.74
113	Feed Tube complete	Quarts all models	.74 .74
113A	Feed Tube complete	Pints all models	.74
116	Pump complete	500, Quarts only	1.72
117	Pump Barrel	500, Quarts only 500, Quarts only 500, Quarts only	.00
118	Pump Packing Nut	500, Quarts only	1.33
119	Pump Plunger complete	500, Quarts only	1.06
505F	Fount (Pint)	505	4.80
504F	Fount (Quart)	304	5.10
154	Soldering Iron Hook Filler Plug with Lead Washer	All models	.19
157	Filler Plug with Lead Washer	All models ex-	
		cept 506, 508 Ot.	.51
164	Pump Check Valve Nozzle Check Valve Plunger (less cork)	All models	.13
165	Check Valve Plunger (less cork)	All models	.13
269	Valve Stem Packing Nut	All models	.13
171	Wooden Handle with Screws	All models	.30
284 185	Valve Stem Packing	All models	.09
	Burner Screw	All models	.09
186 188	Burner Screw Preheater Cup Screw Feed Wick only Feed Wick only	Quarta all models	.09
188A	Food Wick only	Pinte all models	.09
507F	Fount (Pint)	507, 508 506, 508 506, 507 506, 507, 508, 509 508, 509	5.70
506F	Fount (Pint)	506 508	6.00
211	Rurner complete	506, 507	6.00 7.33
212	Burner complete	506, 507, 508, 509	1.39
212K	Valve Stem complete	508, 509	1.39
216	Pump complete	All models	
		except 500	2.46
217	Pump Barrell	All models	
		except 500	1.11
219	Pump Plunger complete	All models	1.06
251	Burner Body front	506, 507, 508, 509 506, 507, 508, 509 506, 508	1.85
255	Preheater Cun	506, 507, 508, 509	.30
257	Filler Plug	506, 508	.30 .74
259	Burner Body (back)	506, 507, 508, 509	1.44
281		506, 507, 508, 509	4.0
312	Valve Stem complete	504, 505, 508, 509	1.39
351	Valve Stem complete Burner Body (one piece) Burner complete Burner Body (one piece) Preheater Cup	506, 507, 508, 509 506, 507, 508, 509 504, 505, 508, 509 500, 501, 502, 503 504, 505	1.44
411	Burner complete	504, 505	4.19
451	Burner Body (one piece)	504, 505	1.67
455	Preheater Cup	All models except	
404		506, 507, 508, 509	.30
481	Windshield	506, 507, 508, 509 504, 505	.19
*962D	Gas Tip Wrench		1.99
1610A	Pump Handle Valve Stem (cast iron wheel)	All models	.19
1612	Valve Stem (cast fron wheel)	500, 501, 502, 503 All models	.37
1613 1617	Pump Rod	All models	.13
101/	Needle Bushing	500 501 502 FOR	.30
1809	Pump Pieton complete	All models	.34
1810	Pump Bushing Lead Washer	All models	.13
1811	Pump Piston	All models	.15
1812	Pump Leather	All models	.09
1813	Pump Leather Pump Piston Nut Pump Rod Nut	All models	.10
1814	Pump Rod Nut.	All models	.07
1815	Pump Rod Cushion Spring	All models	.07
1816	Pump Check Valve Cork	All models	.07
1817	Pump Check Valve Cork Pump Check Valve Spring	All models	.07
1819	Lead Washer for Filler Plug	All models	
			.09
2612	vaive Stem (bakelite wheel)	500, 501, 502, 503	.74
2618	Vaporizer Tube	506, 507, 508, 509	.06
2618 2621	Valve Stem (bakelite wheel)	506, 507, 508, 509 All models 506, 508	.06 .22 .19

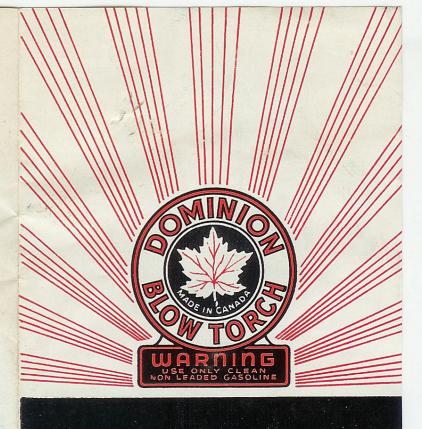


DOMINION BLOW TORCHES

Made in Canada



The Handyman's Torch

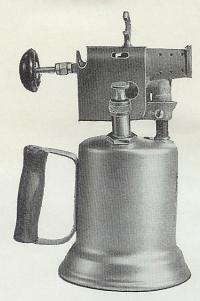

Mechanic's Model for tough slugging, steady service

MODEL 506 is the ideal torch for the mechanic. It has a heavy two-piece burner which develops a constant, powerful hot blast under severe conditions. The burner has a removable orifice and a replaceable self-cleaning needle; both of these parts can be changed quickly and economically. The removable windscreen assures quick generation and efficient operation. The Bakelite control handle

always remains cool. The tank can be easily filled either at the top by removing the pump or by removing the bottom plug. The heavy duty pump produces ample pressure with a few strokes. Tank capacity, either quart or pint (please specify . . . order by the numbers as shown below).

MODEL 508 Quart and 509 Pint is the same as above, but equipped to burn Kerosene instead of gasoline.

Packed 12 to a shipping carton; weight 60 lbs.

Model 506

Model 507

Quart Capacity

Pint Capacity



General Purpose Blow Torch

a hard worker at a medium price

MODEL 504 is a well-built mechanic's torch at a medium price. The burner is rugged and powerful. This burner is also equipped with a removable orifice and a replace-

able, self-cleaning needle, slip-on windscreen and a cool Bakelite control handle. Tanks are bottom filled and fitted with a heavy duty pump.

Tank capacity, either quart or pint (please specify . . . order by the numbers as shown below).


Packed 12 to a shipping carton; weight 52 lbs.

Model 504

Model 505

Quart Capacity

Pint Capacity

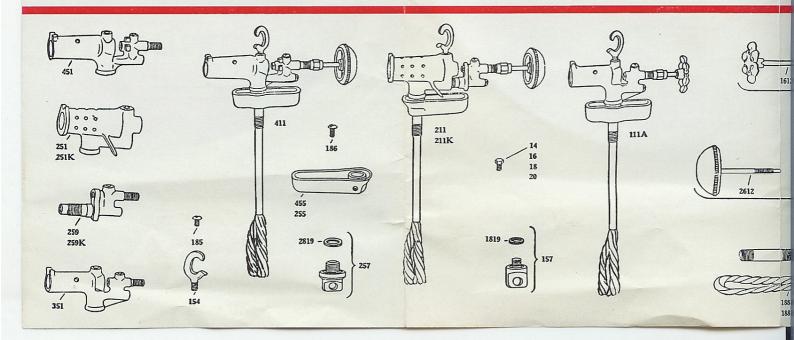



An Efficient Torch at a low price

MODEL 502 is an efficient torch for the handyman or for occasional use. The burner is of up-to-date construction, extremely well made for a low-priced torch. It has a positive shut-off and self-cleaning feature which prevents en-

largement of orifices. Control shaft is the solid type; burner has removable orifice which can be easily and cheaply replaced. A heavy duty pump quickly supplies and maintains pressure. Tanks are bottom filled.

Tank capacity, either quart or pint (please specify . . . order by the numbers as shown below).

Packed 12 to a shipping carton; weight 49 lbs.

Model 502

Quart Capacity

Model 503

Pint Capacity



A Real Good Torch at a low price

MODEL 500 is the lowest priced torch manufactured by DOMINION TORCHES It has essentially the same features as the Model 502, with the same efficient burner.

The tank is filled through the top by removal of the pump. The pump is reliable, and quick and easy to operate. This torch is recommended for household or intermittent use.


Packed 12 to a shipping carton; weight 48 lbs.


Model 500

Quart Capacity

Model 501

Pint Capacity

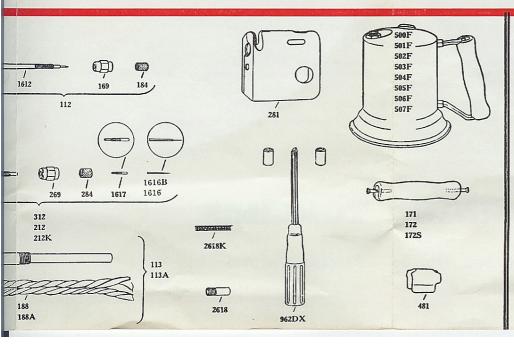

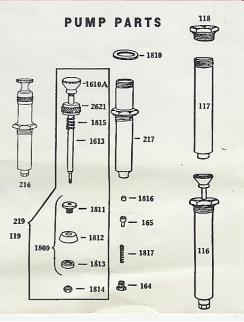

DIRECTIONS

for operating DOMINION BLOW TORCHES

- Use only CLEAN, NON-LEADED, gasoline. Never use Hi-test or Ethyl. Be sure to wipe off any excess gasoline from the tank before lighting the torch.
- Tighten filler plug and pump. Pump about six strokes of air into the tank. If there is no compression, oil the pump leather.
- Allow gasoline to flow into priming cup until full, by opening the needle valve slightly. Then shut off the valve. Do not allow the gasoline to run over the priming cup.
- Light the fuel in priming cup and when nearly burned up, open needle valve slightly and hold a lighted match close to the vents, NOT in front of the nozzle. This pre-heating of the torch is very important and may mean the difference between efficient operation and trouble.
- In extreme weather it may be necessary to repeat the pre-heating process by refilling priming cup a second time. Always shelter the torch when lighting.
- Do NOT have too much pressure in the tank or you cannot control the low flame. Increase the pressure only when you need a larger volume of flame.
- Use care when shutting off the needle valve. After torch has cooled slightly open needle valve and release the gas left in the chamber, then gently close the valve.
- Reep the torch clean and follow above directions to the letter and your DOMINION TORCH will serve you faithfully for a long time to come.

CAUTION

- A. Normal operating temperature will do no harm but DO NOT apply extra heat to tank.
- B. If fuel spills over onto tank, wipe off clean before lighting.
- C. Oil the air pump often.
- D. Examine rubber seat in pump check valve if pump leaks.
- E. To stop leaks in packing gland, shut off burner and tighten.
- **F.** If trouble develops which you cannot remedy, return the torch to the factory where it will be put in first class shape. If pump or burner only need repairing, return the defective part. The burner will detach easily if the torch is warm.
- G. Common brown laundry soap on the threads will seal any threaded joints.
- **H.** If pump handle will not stay down, cork seat should be renewed at once, otherwise gas will escape into pump and may ignite.
- Use only the proper gasoline as mentioned above and make sure dirt does not get into the tank when filling. Remember, proper care saves wear.

DOMINION TORCHES

MADE IN CANADA

Post Box No. 68 - Preston, Ontario

ASK YOUR DEALER