 
Ontimus



AB OPTIMUS


UPPLANDS VÄSBY, SWEDEN



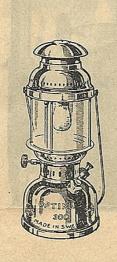






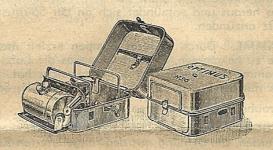

AKTIEBOLAGET OPTIMUS

Upplands Väsby, Sweden

Printed in Sweden by Holmberg & Söner Katrineholm 1955

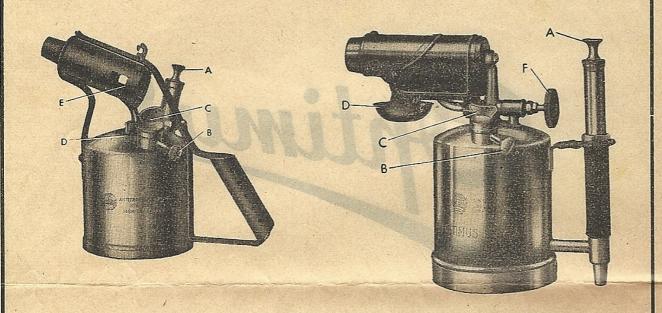

DIRECTIONS FOR USE OF OPTIMUS Blowlamps for Paraffin (Kerosene)

FILLING. Unscrew tank lid (C). Do not fill the tank more than to 3/4 with best quality paraffin. Screw on tank lid tight. Let the air screw (B) be open.

HEATING. Fill the spirit cup (D) to the brim with methylated spirit and light the spirit.

LIGHTING. When the spirit is almost burnt out, but not before, screw the air screw (B) tight. Give the pump (A) some full strokes. The gas will then rush out through the hole of the nipple (E) and ignite, if not light with a match.

REGULATING THE FLAME. Give the pump some more strokes to increase the flame. Open the air screw (B) a little to diminish the flame and screw it tight again. (On lamps with regulating spindle the pressure is regulated by the pump and the flame by the spindle.)

EXTINGUISHING. Open the air screw (B) and let it be open.

CLEANING THE NIPPLE. Should the hole of the nipple (E) be clogged, so that pumping does not increase the flame, clean the nipple (E) with the cleaning needles delivered with the lamp. Keep a burning match ready, if the flame should go out.

SOME IMPORTANT HINTS.

- 1. Use only best quality paraffin and always strain it.
- 2. Keep the can, where the paraffin is stored, absolutely clean to avoid impurites in the fuel.
- 3. Never fill the tank more than to 3/4 with paraffin.
- 4. When the lamp is not used, let the air screw (B) be open, otherwise paraffin may ooze out through the hole of the nipple (E).
- 5. If the pump does not work satisfactorily, the leather packing has probably become dry. Unscrew the pump lid and take out the pump rod, oil or soak with paraffin the leather cup, and replace the pump rod. This can be done without any risk while the burner is burning.
- 6. The burner should be kept clean and free from dirt.