
## The "ALWAYS RELIABLE" LINE of QUALITY

## DIRECTIONS



INFORTANT IN CRIMATION

Save for Future Use

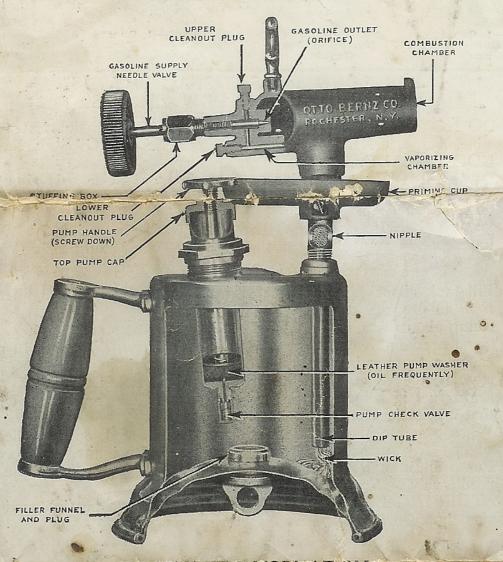

## OTTO BERNZ CO., INC.

ROCHESTER, N. Y., U. S. A.

Established 1876



MANUFACTURERS OF TORCHES, FURNACES, BRAZIERS, AND A COMPLETE LINE OF REGULAR PLUMBERS TOOLS



No. 50—1 Quart (Flat Burner) Gasoline



No. 83—1 Quart No. 84—1 Pint Gasoline



No. 87—1 Quart No. 88—1 Pint Gasoline



No. 6-I Pint Gasoline-Kerosene

## FOR LONG and SATISFACTORY USE OBSERVE THESE FEW "DON'TS"

- 1. DO NOT USE ethyl blend, "treated", high test, or "lubricated" gasoline. USE ONLY A CLEAN, ORDINARY GASOLINE OF GOOD GRADE.
- 2. DO NOT PUMP excessive pressure in tank. Use only about 5 to time, as required.
- 3. DO NOT FORGET to oil the pump washer occasionally. Merely unscrew top pump plunger, then soak washer in lubricating oil.

#### GENERAL INSTRUCTIONS

- 1. Fill tank about 3/4 full with good, clean gasoline. Close filler plug tight to prevent leaking.
- 2. Pump about 5 to 10 strokes of air into tank at start.
- 3. Open needle valve slightly. Hold hand in front of burner to permit gasoline to flow into priming cup. When priming cup is 3/4 full close needle valve. WIPE OFF ANY OVERFLOW.
- 4. Light fuel in priming cup. If necessary, shield flame from wind so that burner is properly preheated.
- 5. When gasoline in priming cup is nearly consumed, open needle valve slightly (by turning to left) to allow burner to ignite.
- 6. Pump additional pressure in tank and regulate size of flame with needle valve. Screw down plunger of pump.
- 7. STUFFING BOX NUT on needle valve should be tightened occasionally. Do this when needle valve is closed.

## SPECIAL INSTRUCTIONS FOR GASOLINE TORCHES

No. 6-C, 50, 83, 84, 87 and 88.

The needle valve of above torches enters directly into the burner orifice. WHEN EXTINGUISHING FLAME, DO NOT TURN VALVE TOO TIGHTLY, as this would enlarge the orifice, thus spoiling burner. Merely close valve *gently* so as to extinguish flame.



No. 79A—1 Quart No. 80A—1 Pint Gasoline-Kerosene



No. 83A—1 Quart No. 84A—1 Pint Gasoline




No. 87A—1 Quart No. 88A—1 Pint Gasoline



No. 509A—1 Quart No. 250A—1 Pint Gasoline-Kerosene

These four torches equipped with removable slender type self cleaning needles.

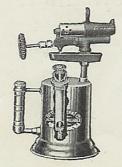

No. 79—1 Quart No. 80—1 Pint Gasoline-Kerosene



No. 92-2 Quarts Gasoline-Kerosene



No. 16-1/4 Pint Alcohol



No. 30—1/4 Pint

# SPECIAL INSTRUCTIONS FOR GASO.-KERO. TORCHES No. 6, 31, 79, 80, 82, 82-B, 82-C, 92, 92-B and 92-C.

Above torches are regularly equipped for gasoline use and burner jet block is marked "G". For use with kerosene, insert jet block marked "K" in burner body. KEROSENE JET BLOCK SUPPLIED ON REOUEST.

The needle valve of above torches does not enter directly into burner orifice, therefore it is impossible to enlarge orifice no matter how tightly walve is turned

Occasionally clean burner block, using the special cleaning needles, which will be found in the handle of the torch.

# SPECIAL INSTRUCTIONS FOR NO. 79-A, 80-A, 83-A, 84-A, 87-A, 88-A, 91, 93, 93-C, 250-A and 500-A TORCHES.


Needle valves of above torches are equipped with removable, slender type self-cleaning needle pin, which automatically cleans burner orifice each time torch is used. Do not remove this pin from holder.

No. 91 torch also has a special spiral spring cleaner for generating chamber. Occasionally turn lower looped handle to RIGHT to loosen carbon. Do this while torch is in use.


#### TO CLEAN BURNER

Unscrew burner. (On quart and pint size torches, first unscrew pump). Take burner apart and clean all parts in gasoline. When removing needle valve, protect the fine point by resting the entire valve on wheel handle. When reassembling, rub common brown soap on all threaded joints and screw all parts tightly to prevent leaks. BE SURE NOT TO ENLARGE SMALL GAS ORIFICE, WHICH MUST REMAIN IN ITS ORIGINAL SIZE TO PRODUCE THE PERFECT FLAME THIS TORCH HAD WHEN TESTED AT OUR FACTORY.

This torch has passed rigid tests and was in perfect condition when it left the factory. If, after following our instructions, you cannot obtain proper results, RETURN TORCH DIRECT TO FACTORY for adjustment, stating nature of complaint. No dealer is authorized to make any adjustment for us.

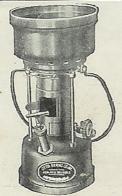

No. 32-1 Gallon Gasoline-Kerosene

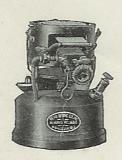

No. 90-1 Gallon Gasoline




No. 46 Pump No. 45 Bulb 1 Gallon Gasoline




No. 44 Pump No. 43 Bulb 34 Gallon Gasoline


# OTTO BERNZ CO. Inc. ESTABLISHED ROCHESTER, N. Y. \* List Prices of Repair Parts for Gasoline Torches

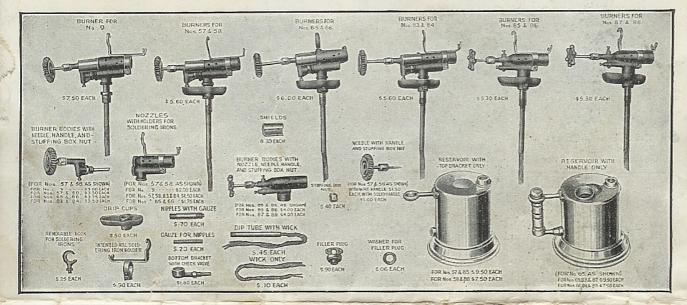

### \* List Prices of Repair Parts for Gasoline-Kerosene Torches

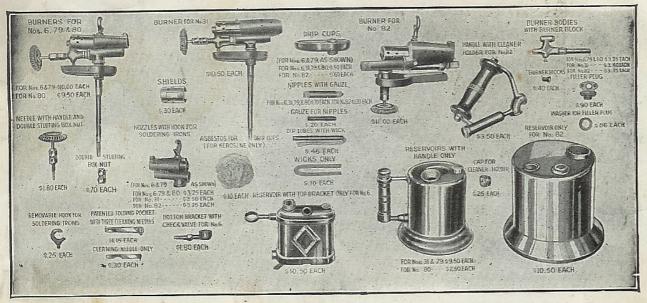

### \* List Prices of Pumps and Repair Parts for Pumps

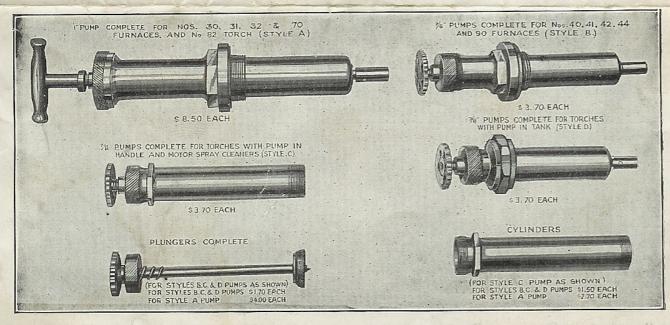

\* Note: Write for discounts from list prices. When ordering repairs give Model Number of torch found on pump handle.

C. P. 25m-5-34